

Starting from cold: first stage (figure 108)

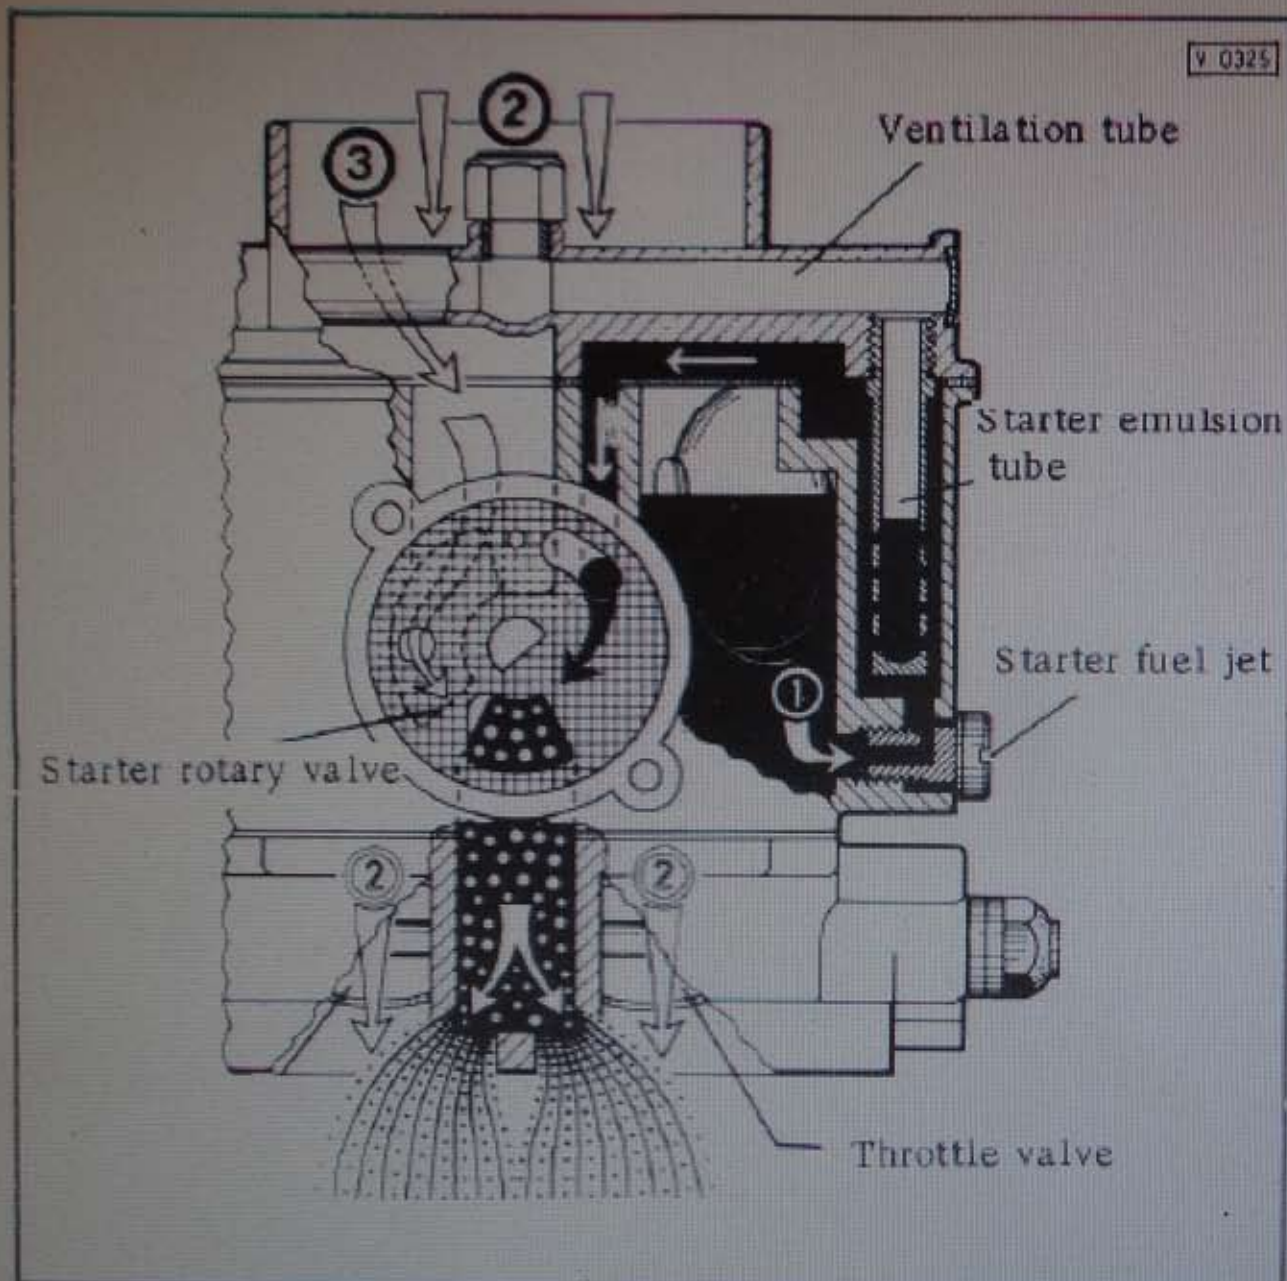


Fig. 108 Starting from cold: 1st stage

1. Fuel feed
2. Entry of main air
3. Entry of starter air

08 02 2021